

Installation


VigorConnect is compatible with all of the Linux distribution, including Ubuntu, OpenSUSE, CentOS, Debian and RedHat.

To start up the VigorConnect, please

1. Download VigorConnectLinuxSetup_1.5.2.
2. Open the terminal.
3. Access into "/usr/local/VigorConnect".

```
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~# ls Vigor*  
VigorConnect1.5.2.pdf          VigorConnectSetup_1.5.2.7z  
VigorConnect.db               VigorConnectSetup_1.5.2.exe  
VigorConnectLinuxSetup_1.5.2  VigorConnectSetup_1.5.2-RC2.exe  
VigorConnectLinuxSetup_1.5.2-RC2  VigorConnectSetup_1.5.2.zip  
VigorConnectLinuxSetup_1.6.0-B3  VigorConnectSetup_1.6.0-B3.exe  
VigorConnectPiSetup_1.5.2-RC2    VigorSyslogCollector  
VigorConnectSetup_1.3.1-VN.exe   VigorSyslogCollector.exe  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~#  
root@cshih-linux:~# chmod +x VigorConnectLinuxSetup_1.5.2  
root@cshih-linux:~# sudo ./VigorConnectLinuxSetup_1.5.2
```

4. Execute "chmod+x VigorConnectLinuxSetup_1.5.2".
5. Execute "sudo ./VigorConnectLinuxSetup_1.5.2".
6. In the following screen, specify the installation item on **Destination Folder**.

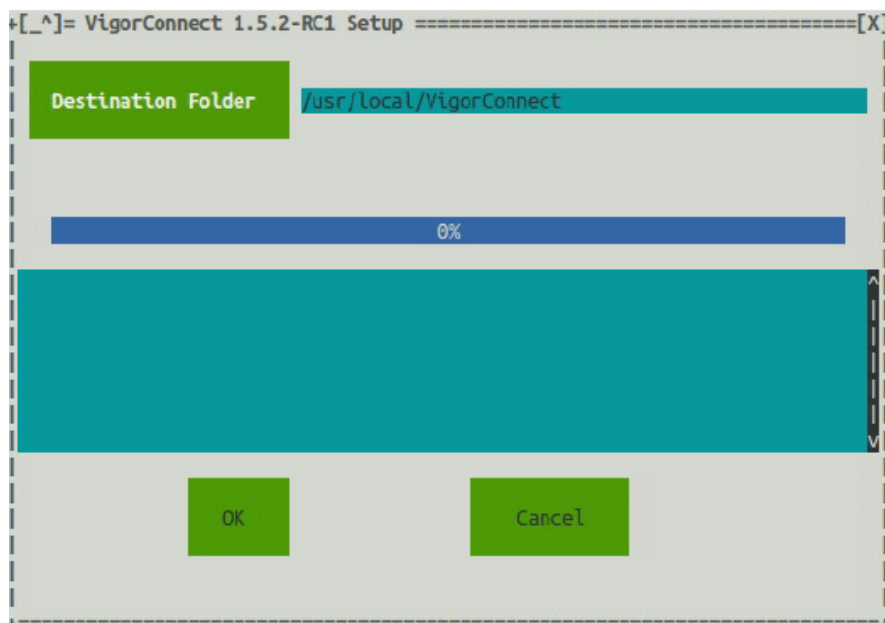


7. Click **OK** to proceed the installation.

To uninstall the program, please

1. Open the terminal.
2. Access into `"/usr/local/VigorConnect"`.
3. Execute `"sudo ./Uninstall"` and follow the on-screen instruction.

Management

1. Open the terminal.
2. Execute "sudo ./VigorConnectMan" to get the following screen.

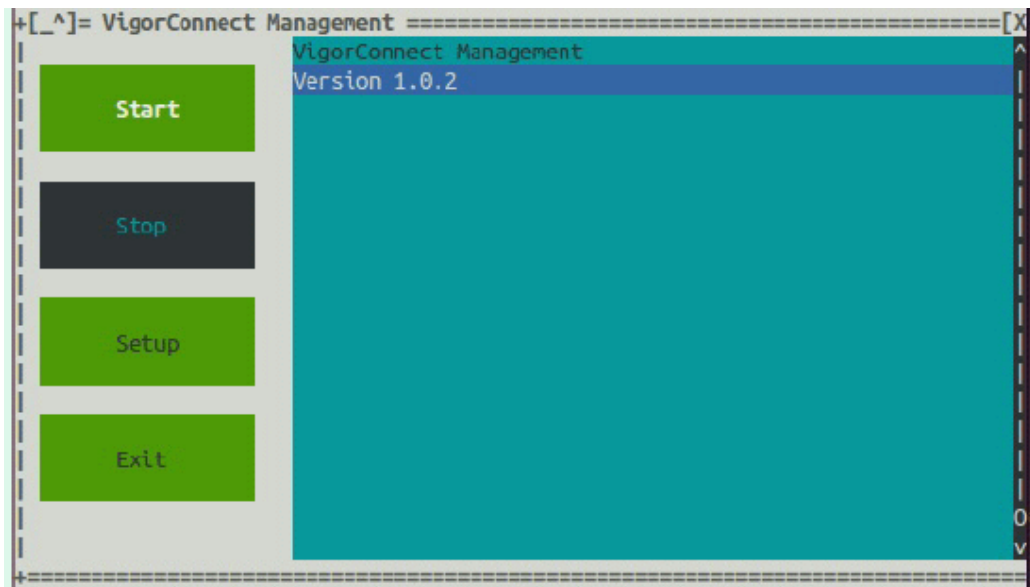


In which,

Start - Run the VigorConnect.

Stop - Terminate the VigorConnect operation.

Setup - Configure settings for VigorConnect.

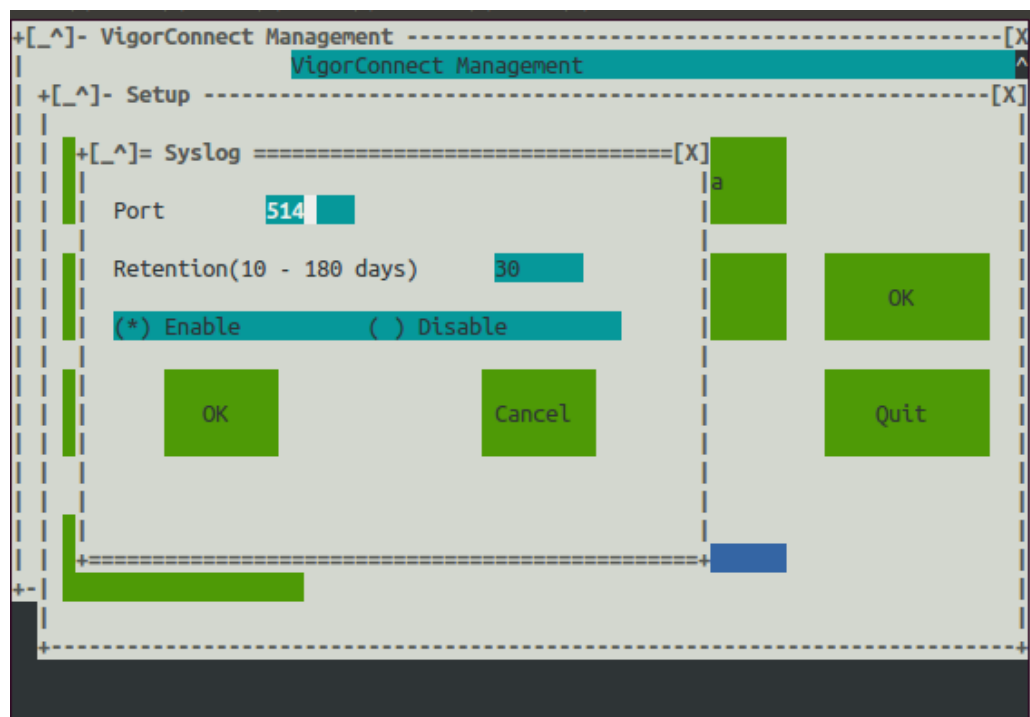

Exit - Exit the VigorConnect Management screen.